Teensy 3.1 Back Side

Additional pins and features available on the back side

Cut to separate VIN from VUSB, if using a battery charger or external power for USB Device mode.

USB Signals

Reset

Add 32.768 kHz Crystal for Real Time Clock.

Add 150 µF Capacitor for USB Host mode.

Use 3V coin cell for Real Time Clock.
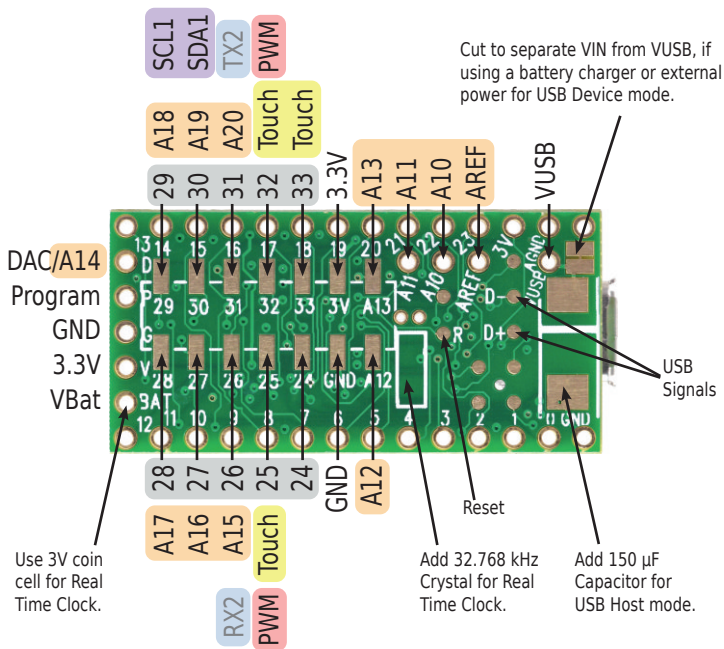
For solutions to the most common issues and technical support, please visit:

www.pjrc.com/help

Teensy 3.1 System Requirements:
  PC computer with Windows XP, 7, 8 or later
    or Ubuntu Linux 12.04 or later
    or Macintosh OS-X 10.6 or later
  USB Micro-B Cable

7 14833 87975 6